

# WIRING DIAGRAM

**Chassis Ground:** Connect to a scraped (bare) metal surface in the driver kick panel. NEVER connect to dash brackets or at the same point as other components.

**12v Constant Power:** Remove the in-line fuse before connecting to a wire that has (+)12v at all times.

**12v Constant Power:** Remove the in-line fuse before connecting to a wire that has (+)12v at all times.

**12v Constant Power:** Remove the in-line fuse before connecting to a wire that has (+)12v at all times.

**12v Constant Power:** Remove the in-line fuse before connecting to a wire that has (+)12v at all times.

**12v Constant Power:** Remove the in-line fuse before connecting to a wire that has (+)12v at all times.

**12v Constant Power:** Remove the in-line fuse before connecting to a wire that has (+)12v at all times.

**12v Constant Power:** Remove the in-line fuse before connecting to a wire that has (+)12v at all times.

<b>BLACK</b>	(-) Chassis Ground
<b>RED</b>	(+) 12V Constant Power
<b>WHITE</b>	(+) Switched Power
<b>BROWN</b>	(+) Takedown Power
<b>GREEN</b>	(+) Cruise Mode
<b>BLUE</b>	(+) Momentary Pattern
<b>YELLOW</b>	(+) Right Directional
<b>ORANGE</b>	(+) Left Directional