



HG2 SIDERUNNER


INSTALL GUIDE

2023 FORD EXPLORER





1. Locate tabs under vehicle (Notice: There is a plastic tab in front of a metal tab)

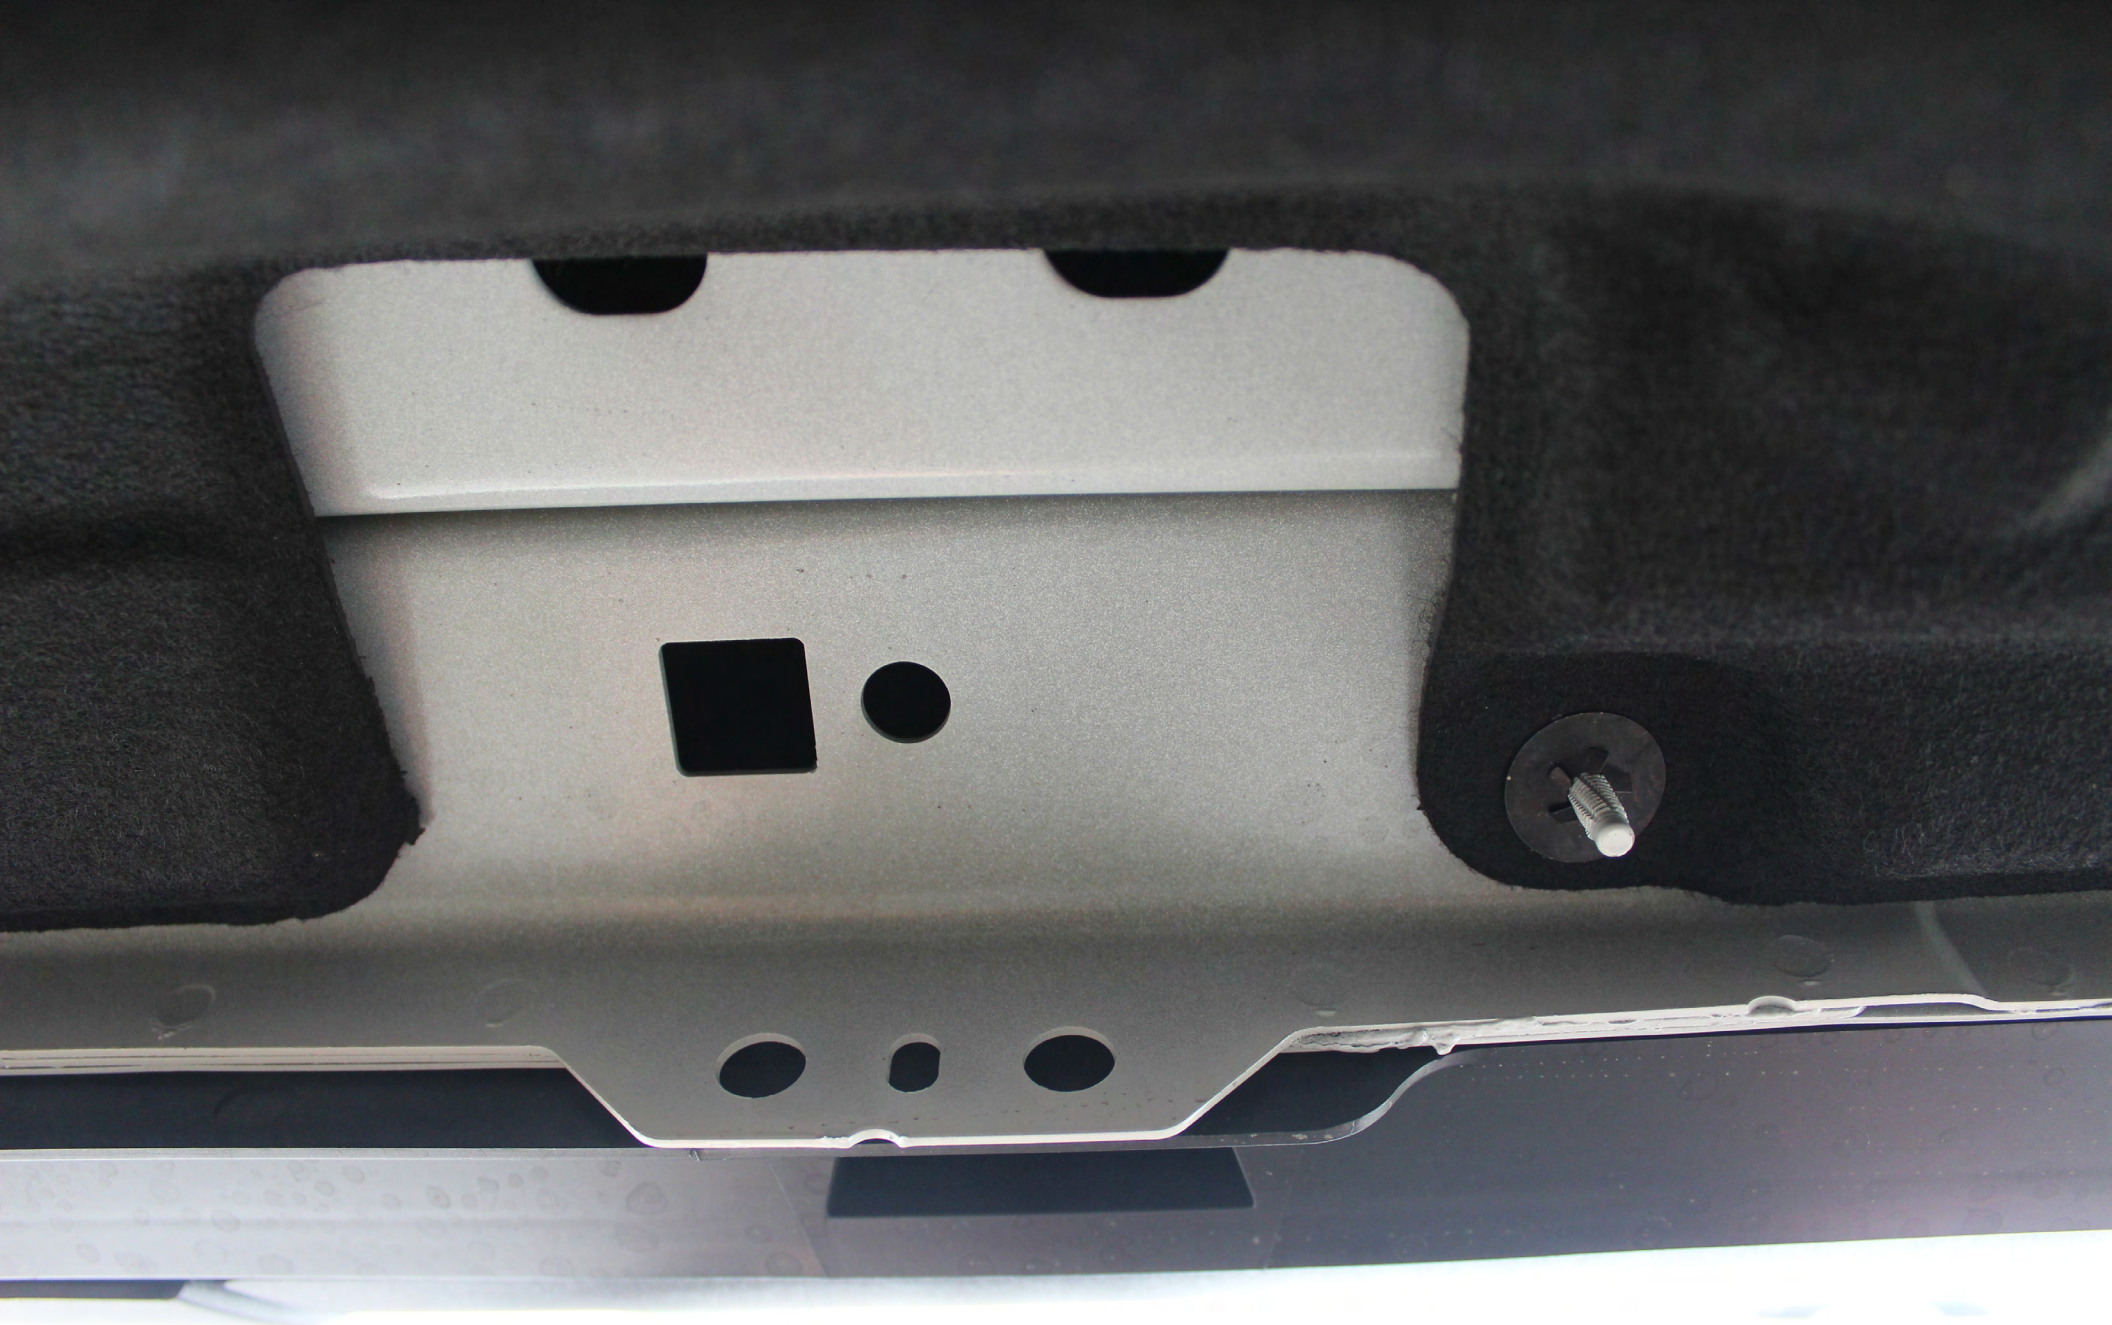

2. Behind each metal tab, there are 3 holes



***3. Line up the HG2 Siderunner with the holes on the metal tab
(pre-drilled holes in HG2 Siderunner will not line up with the metal holes)***



4. Drill holes in plastic piece corresponding to the correct hole in each tab



5. Line up and mark the bracket of the HG2 Siderunner to the corresponding hole by placing the HG2 Siderunner in between the plastic and metal piece



6. Drill holes into the marked locations of the bracket of the HG2 Siderunner



7. Place the HG2 Siderunner in between the plastic and metal tabs and bolt it in with a nut on the other end (repeat on other two tabs)

