

HG2 **FRONT** VISOR



2025+ Interior Front Visor Ford Explorer

Introduction:

- Sold as a Pair
- 20 Self Contained Flash Patterns
- Certification: SAE J595 Class 1
- Flood and Cruise mode capabilities
- Designed, Engineered and Made in USA
- 2 modules each, powder coated aluminum housing

CONTENTS	
QTY	COMPONENT
1	MAIN BODY
2	MOUNTING BRACKET
4	4X 10-32 X 1/2 BHCS
4	LIGHTS

WIRES

-  Black (G) - Ground
-  White (P) - Pattern Select
-  Yellow (S) - SYNC
-  Red (V) - Power
-  Blue (T) - Takedown

CHANGE PATTERNS

Apply 12V to WHITE (Pattern_Sel)
for less than 5 seconds

⚠ WARNING

- Only trained technicians should perform installation. It is the installer's responsibility to identify the vehicle's wiring configuration and ensure correct system integration.
- Surface may become hot during regular use.
- Select the correct wire gauge. All power connections to the battery or chassis ground must be capable of handling 125% of maximum current load and must be fused at the power source.
- Always install grommets to protect wires passing through metal or firewall openings.
- High-current interconnects must be securely and correctly terminated. Improper crimping can lead to excessive heat and potential fire hazards. Always follow the crimp connector manufacturer's guidelines.
- Improper installation of connectors, fuses, or wiring can result in vehicle malfunction or fire.
- This system should not be used to disable headlights, brake lights, or any other safety-related equipment.



FAILURE TO FOLLOW THESE GUIDELINES
COULD CAUSE DAMAGE TO THE PRODUCT,
VEHICLE AND/OR SERIOUS PERSONAL INJURY
OR DEATH.

FIG. 1

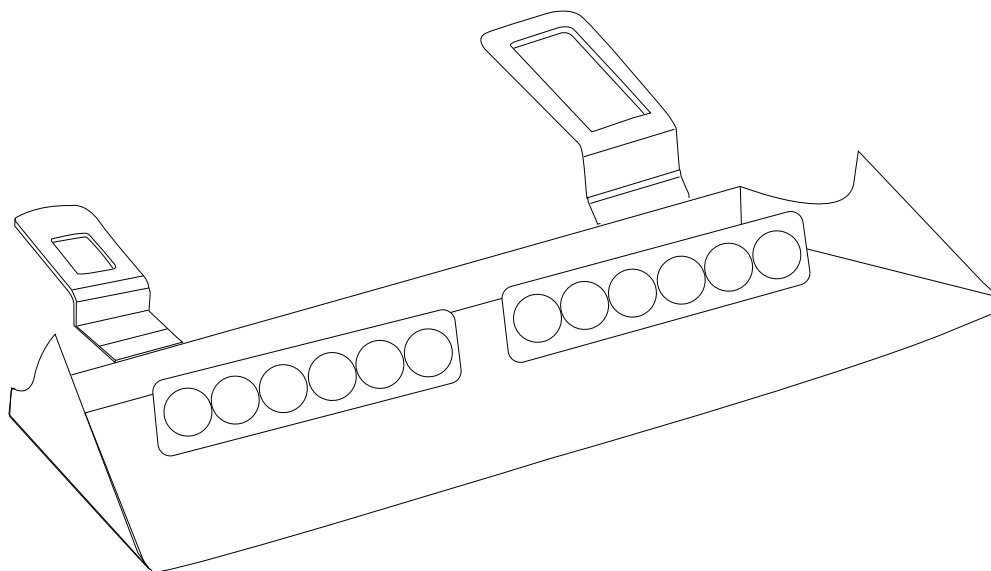


FIG. 2


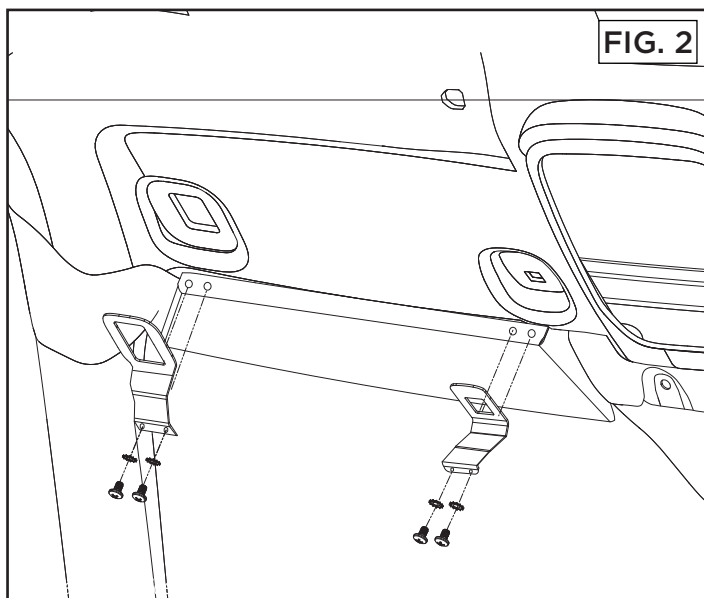


FIG. 3

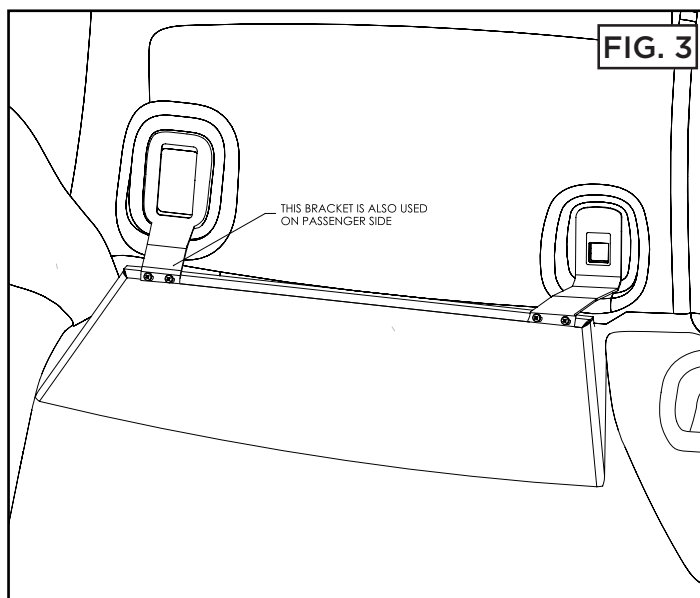

INSTALLATION:

***NOTE: Driver and passenger side installation is identical.**

1. Pull the clip off the outside of the interior visor. After removing the cover clip, pull out the screws.
2. As seen in FIG. 2, use the outer bracket to line up the holes where the screws had been. Place the bracket onto the holes and put the OEM screws back into their location. Leaving the cover clip off, tighten screws down.
3. To install the inside bracket, remove the screw from the inside of the visor clip. This will allow you to pop off the visor clip. Then slide the bracket underneath the visor clip, as seen in FIG.
4. When the bracket is underneath the visor clip, screw the OEM screw back in. Leave the screw loose for adjustability when installing the shroud.
5. Take the shroud and position it in the car. Secure the 1/4"-20 bolt into the shroud. The brackets are slotted for adjustment, as needed.
6. When the shroud is in position, tighten down to the brackets.
7. Tighten down the inside visor clip screw left loose.
8. Repeat Steps 1-7 for the other side's shroud installation.